

# KENT POP-UP TOASTER-R

For Perfect & Crispy Toasts

**KENT**  
Smart Chef  
Appliances

HOUSE of PURITY

## Instruction Manual



Removable  
Crumb Tray



5 HEATING  
MODES



REHEAT  
FUNCTION



DEFROST  
FUNCTION



CANCEL  
FUNCTION

## **INTRODUCTION**

We, at KENT, have always believed that a clean and healthy life is every individual's right. This ethos is what made us embark on a journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes that we live in and the air that we breathe.

With the use of innovative technology and supported by a competent service network, we have been able to create a brand which has become synonymous to well-being and health.

Continuing with the tradition, we now present the KENT Pop-up Toaster-R, a new age kitchen aid to make the perfect toasts from the comfort of your home. KENT Pop-up Toaster-R is so easy to use that you'll put it to work every single day.

## **FEATURES OF KENT POP-UP TOASTER - R**

1. Defrost: Defrost frozen bread slices easily in one step.
2. Reheat: Toasts aren't warm anymore? That's okay! Reheat them instantly.
3. Stop: You can cancel the toasting process at any time.
4. 5 Heating modes: Achieve the desired colour and crispiness for your toasts easily.
5. Removable crumb tray: Cleaning your toaster is now simple. Remove the tray, clean it and slide it back in place.
6. With wide slots, you can easily cook up to 2 slices at a time!
7. Easy to use, clean and store

## KNOW YOUR PRODUCT



## ITEMS IN THE BOX

1. KENT Pop-up Toaster - R : 01 No.
2. User Guide : 01 No.

## USING KENT POP-UP TOASTER - R

- Remove any stickers that might prevent normal operations
- Check the unit for damages. Do not use in case of any damages
- Before switching on the appliance, make sure that your home mains voltage corresponds to the unit's operating voltage.
- Clean the parts of the KENT Pop-up Toaster -R before using (see 'Cleaning & Maintenance' section).
- Make sure all parts are completely dry before you start using the appliance.

## HOW TO OPERATE

1. Clean the toaster before using.
2. Plug in the appliance and let it pre heat for 2-3 minutes. Choose the desired setting as per choice.
3. Once heated, put the bread slices and press the lever down.
4. The bread will start to toast.
5. Once the bread is toasted, the pop up toaster would automatically eject it.
6. After cooking, unplug and let it cool before cleaning and storing.

## CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it.
- Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
- Do not immerse the appliance in water or any other liquid.
- Never put any part of the appliance in the dishwasher.
- After cleaning it thoroughly, dry it using a soft cloth.
- Ensure that the appliance is completely dry before storing it.

**Note:** Never immerse the unit in water, or rinse it under the tap. Wipe it with a dry cloth.

## PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating; it might damage the appliance.
- Unplug before cleaning / moving the appliance.
- Do not use the appliance with damaged power cord or plug.
- If the appliance is not being used for a long time, unplug it.
- Do not use the appliance when it is in recumbent or inclined position.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. After using, unplug and let it cool before cleaning and storing.
3. To reduce the risk of electric shock, do not use near or on wet surfaces.
4. Use the appliance only as described in the manual.
5. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own. Send it to an authorized service center only.
7. Keep cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
11. Turn all controls off before unplugging.
12. This appliance is suitable for indoor use only.
13. Keep away from children.

## TECHNICAL SPECIFICATION

<b>Model Name</b>	<b>KENT POP-UP TOASTER - R</b>
Model Number	16030
Net Weight	1.50 kg
Input Power Supply	Single Phase 220 V, AC 50 Hz.
Power Consumption	850 W



HOUSE of PURITY



Innovations for  
Better Living

Imported & Marketed by:  
**KENT RO SYSTEMS LTD.**  
A-6, Sector-87, Noida-201301

For customer complaints, contact our Customer Care Officer at:  
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 092-789-12345  
E-mail: [service@kent.co.in](mailto:service@kent.co.in) or visit us at [www.kent.co.in](http://www.kent.co.in)

June, 2018