

Designed for Smarter Kitchens



Instruction Manual

STAINLESS STEEL BODY & BLADES

TWO GLASS JARS

800W POWER







Dear Customer,

Congratulations on your purchase and welcome to KENT.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances.** At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Smart Mixer Grinder's** performance and that it will serve you and your family's need without any compromise.

This guide would help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with operation and maintenance.

With the robust quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest **KENT** dealer / branch.

Bon Appepite!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1.	Introduction	. 1
2.	Features of KENT Smart Mixer Grinder	. 1
3.	Know your product	. 1
4.	Items in the Box	.2
5.	Using KENT Smart Mixer Grinder	.2
6.	How To Operate	.2
7.	Cleaning and Maintenance	.3
8.	Precautions	.3
9.	Important Safety Instructions	. 4
10.	Troubleshooting	.5
11.	Technical Specifications	.5

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, the vegetables and fruits that we eat, the homes that we live in and the air that we breathe.

With the use of innovative technology and the support of a competent service network, we have been able to create a brand which has become synonymous with well-being and health. Continuing with this tradition, we now present the KENT Smart Mixer Grinder, a new age high-speed mixer cum blender for home that works like magic.

KENT Smart Mixer Grinder isn't just any other kitchen appliance. The glass jar ensures hygiene and the metal body of the main device makes it certain that it endures regular use for a longer period of time.

Above all, it saves time by doing food preparations smartly in minutes!

FEATURES OF KENT SMART MIXER GRINDER

- 3 speed operation with pulse function for quick chores
- Glass jar for hygiene operations
- Blades made from high grade stainless steel
- Efficiantly grinds, blends and mixes
- Pulse function for finishing quick chores
- Ideal for fruit & vegetable blending, coffee beans
 & spices grinding and much more
- Overheating protection

KNOW YOUR PRODUCT



ITEMS IN THE BOX

KENT Smart Mixer Grinder : 01 No.
 Glass jar with lid : 01 No.
 Chutney jar : 01 No.
 User guide : 01 No.

USING KENT SMART MIXER GRINDER

- 1. Remove any stickers that might prevent from operating the unit.
- 2. Check the unit for damages. Do not use in case of any damages.
- 3. Before switching on the appliance, make sure that your home mains voltage corresponds to the unit's operating voltage.
- 4. Clean the parts of the KENT Smart Mixer Grinder before using the appliance for the first time (see 'Cleaning & Maintenance' section).
- 5. Make sure all parts are completely dry before you start using the appliance.

HOW TO OPERATE

- 1. Place glass/chutney jar on the motor.
- 2. Add desired ingredients.
- 3. Plug in and switch it on.
- 4. Once done, please clean the appliance before storing it.

MODES

Blending Mode

- 1. Put food or liquid in the glass jar
- 2. Put the lid on the glass jar and secure it tightly.
 Place the cap on the lid and turn clockwise to lock
- 3. Switch 'ON'. Use desired speeds as described
 - 1 Low speed. Most suited for blending and shakes
 - 2 Medium speed
 - 3 High speed. Most suited for grinding and crushing
 - P Pulse use. Most suited for shorter bursts of blending and for crushing ice
 - O Off
- 4. Once finished, turn off and unplug
- 5. Remove the glass jar by lifting it

Grinder Mode

- 1. Unscrew the base of the chutney jar
- 2. Fill the jar with ingredients (not more than 75% of the capacity) and screw back to the base
- 3. Place the jar on the motor base
- 4. Switch 'ON'. Use desired speeds as described
 - 1 Low speed. Most suited for blending or shakes
 - 2 Medium speed
 - 3 High speed. Most suited for grinding and crushing
 - P Pulse use. Most suited for shorter bursts of blending and for crushing ice
 - 0 Off
- 5. Once finished, turn off and unplug
- 6. Remove the glass jar by lifting it

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it.
- Remove the lid and clean the jar with warm water and soap solution with the help of a cleaning brush. Never use scouring pads to clean.
- Wipe the main unit with a moist cloth and a non-abrasive liquid cleaner.
- · Do not immerse the appliance in water or any other liquid.
- Never put any part of the appliance in the dishwasher.
- After cleaning it thoroughly, dry it using a soft cloth.
- Ensure that the appliance is completely dry before storing it.

Note: Never immerse the motor unit of the blender in water, nor rinse it under the tap.

PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating, it might damage the appliance.
- Unplug before cleaning / moving the appliance.
- Do not use the appliance with a damaged power cord or plug.
- Do not use the appliance near any heat source.
- If the appliance is not used for a long time, unplug it.
- Do not use the appliance when it is in a recumbent or inclined position.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1. Unplug, when not in use and before servicing.
- 2. To reduce the risk of electric shocks, do not use near or on wet surfaces.
- 3. Use the appliance only as described in the manual.
- 4. Do not use the appliance if the cord or the plug is damaged or worn out. Replace the damaged cord or plug immediately.
- Do not try to service the appliance on your own. Send it to an authorized service center only.
- 6. Keep the cord away from heated surfaces.
- 7. Do not unplug the appliance by pulling the cord. Always unplug by pulling out the plug.
- 8. To avoid electric shocks, do not use the appliance with wet hands.
- 9. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
- 10. Turn all controls off before unplugging.
- 11. This appliance is suitable for indoor use only.
- 12. Keep away from children.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorized service centre for assistance.
The appliance suddenly stops working while running.	The appliance has overheated.	Let the appliance cool for 20 minutes before attempting to restart it.
	The appliance is overloaded.	Remove some ingredients, add some water and try again.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
he appliance makes lots of noise.	Jar is not placed properly.	Reposition the jar in the correct position.
	Blender's inner drive is broken.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
Motor does not work properly.	Appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Model Name	KENT SMART MIXER BLENDER
Model Number	116029
Net Weight	3.0 kg
Input Power Supply	Single Phase 220 V, AC 50 Hz.
Total Power Consumption	800 W
Jar Capacity	1.5 L







Imported & Marketed by: KENT RO SYSTEMS LTD. A-6, Sector-87, Noida-201301

For customer complaints, contact our Customer Care Officer at: E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India. Call: 092-789-12345 E-mail: service@kent.co.in or visit us at www.kent.co.in