

KENT WET & DRY VACUUM CLEANER 30 L

Energy Efficient • Low Noise



 
HOUSE of PURITY

Instruction Manual

WET & DRY
FUNCTION
FOR DEEP
CLEANING



BLOWER
FUNCTION

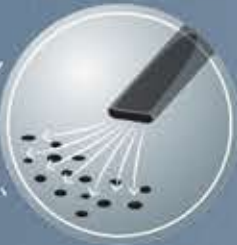

HIGH
SUCTION



30
LTR.



NEW AGE VACUUM CLEANERS
Pure Cleaning / Healthy Living



Welcome to KENT

Dear Customer,

At the outset, allow us to thank you for your trust in KENT Wet & Dry Vacuum Cleaner 30L. At KENT, we take pride in our reputation for product quality and industry proven performance. We are certain that your decision to own KENT Wet & Dry Vacuum Cleaner 30L will go a long way towards keeping you and your family in good health. We are confident that you will be more than satisfied with its performance and it will serve your need for a safer and cleaner living, without any compromise.

This guide would help you in getting the best out of your KENT Wet & Dry Vacuum Cleaner 30L. Please go through the booklet to familiarize yourself with its proper operation and maintenance. So that you can look forward to years of trouble-free service. To ensure that the warranty of your KENT Wet & Dry Vacuum Cleaner 30L is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Happy Cleaning,

KENT RO Systems Ltd.

Table of Contents

1.	Introduction	1
2.	Features of KENT Wet & Dry Vacuum Cleaner 30L	1
3.	Know Your Product	1
4.	Items in the Box	2
5.	Assembling your KENT Wet & Dry Vacuum Cleaner 30L	2
6.	Using the Appliance	3
7.	Important Instructions	4
8.	Cleaning and Maintenance	5
9.	Important Safety Instructions	6
10.	Warning	7
10.	Troubleshooting	8
11.	Technical Specifications	8

Introduction

We, at KENT have always believed that a clean and healthy life is the right of every individual. This ethos made us embark on the journey to develop innovative solutions for purifying water, fruits & vegetables and air. With the use of an innovative technology and supported by a competent service network, we have been able to create a brand, which has become synonymous with well-being and health.

Continuing with the tradition, we now present the KENT Wet & Dry Vacuum Cleaner 30L, with state-of-the-art technology & feature to pick wet spills and dry dirt to provide clean, dust-free and spotless surroundings.

KENT Wet & Dry Vacuum Cleaner 30L, do not use filtration bags, unlike traditional vacuum cleaners available in the market. The dust and wet spills is collected in a stainless steel body with a 30 L capacity for easy disposal of waste.

Features of KENT Wet & Dry Vacuum Cleaner 30L

1. Picks up dry dust and wet spills from the surface.

 
2. Blower function to remove deep embedded dust.

3. Stainless steel body with 30 L capacity.
4. High efficiency motor with a strong suction force for efficient cleaning.

5. Rubberised wheel for ease movement.

6. Light weight & Low noise.

Know Your Product

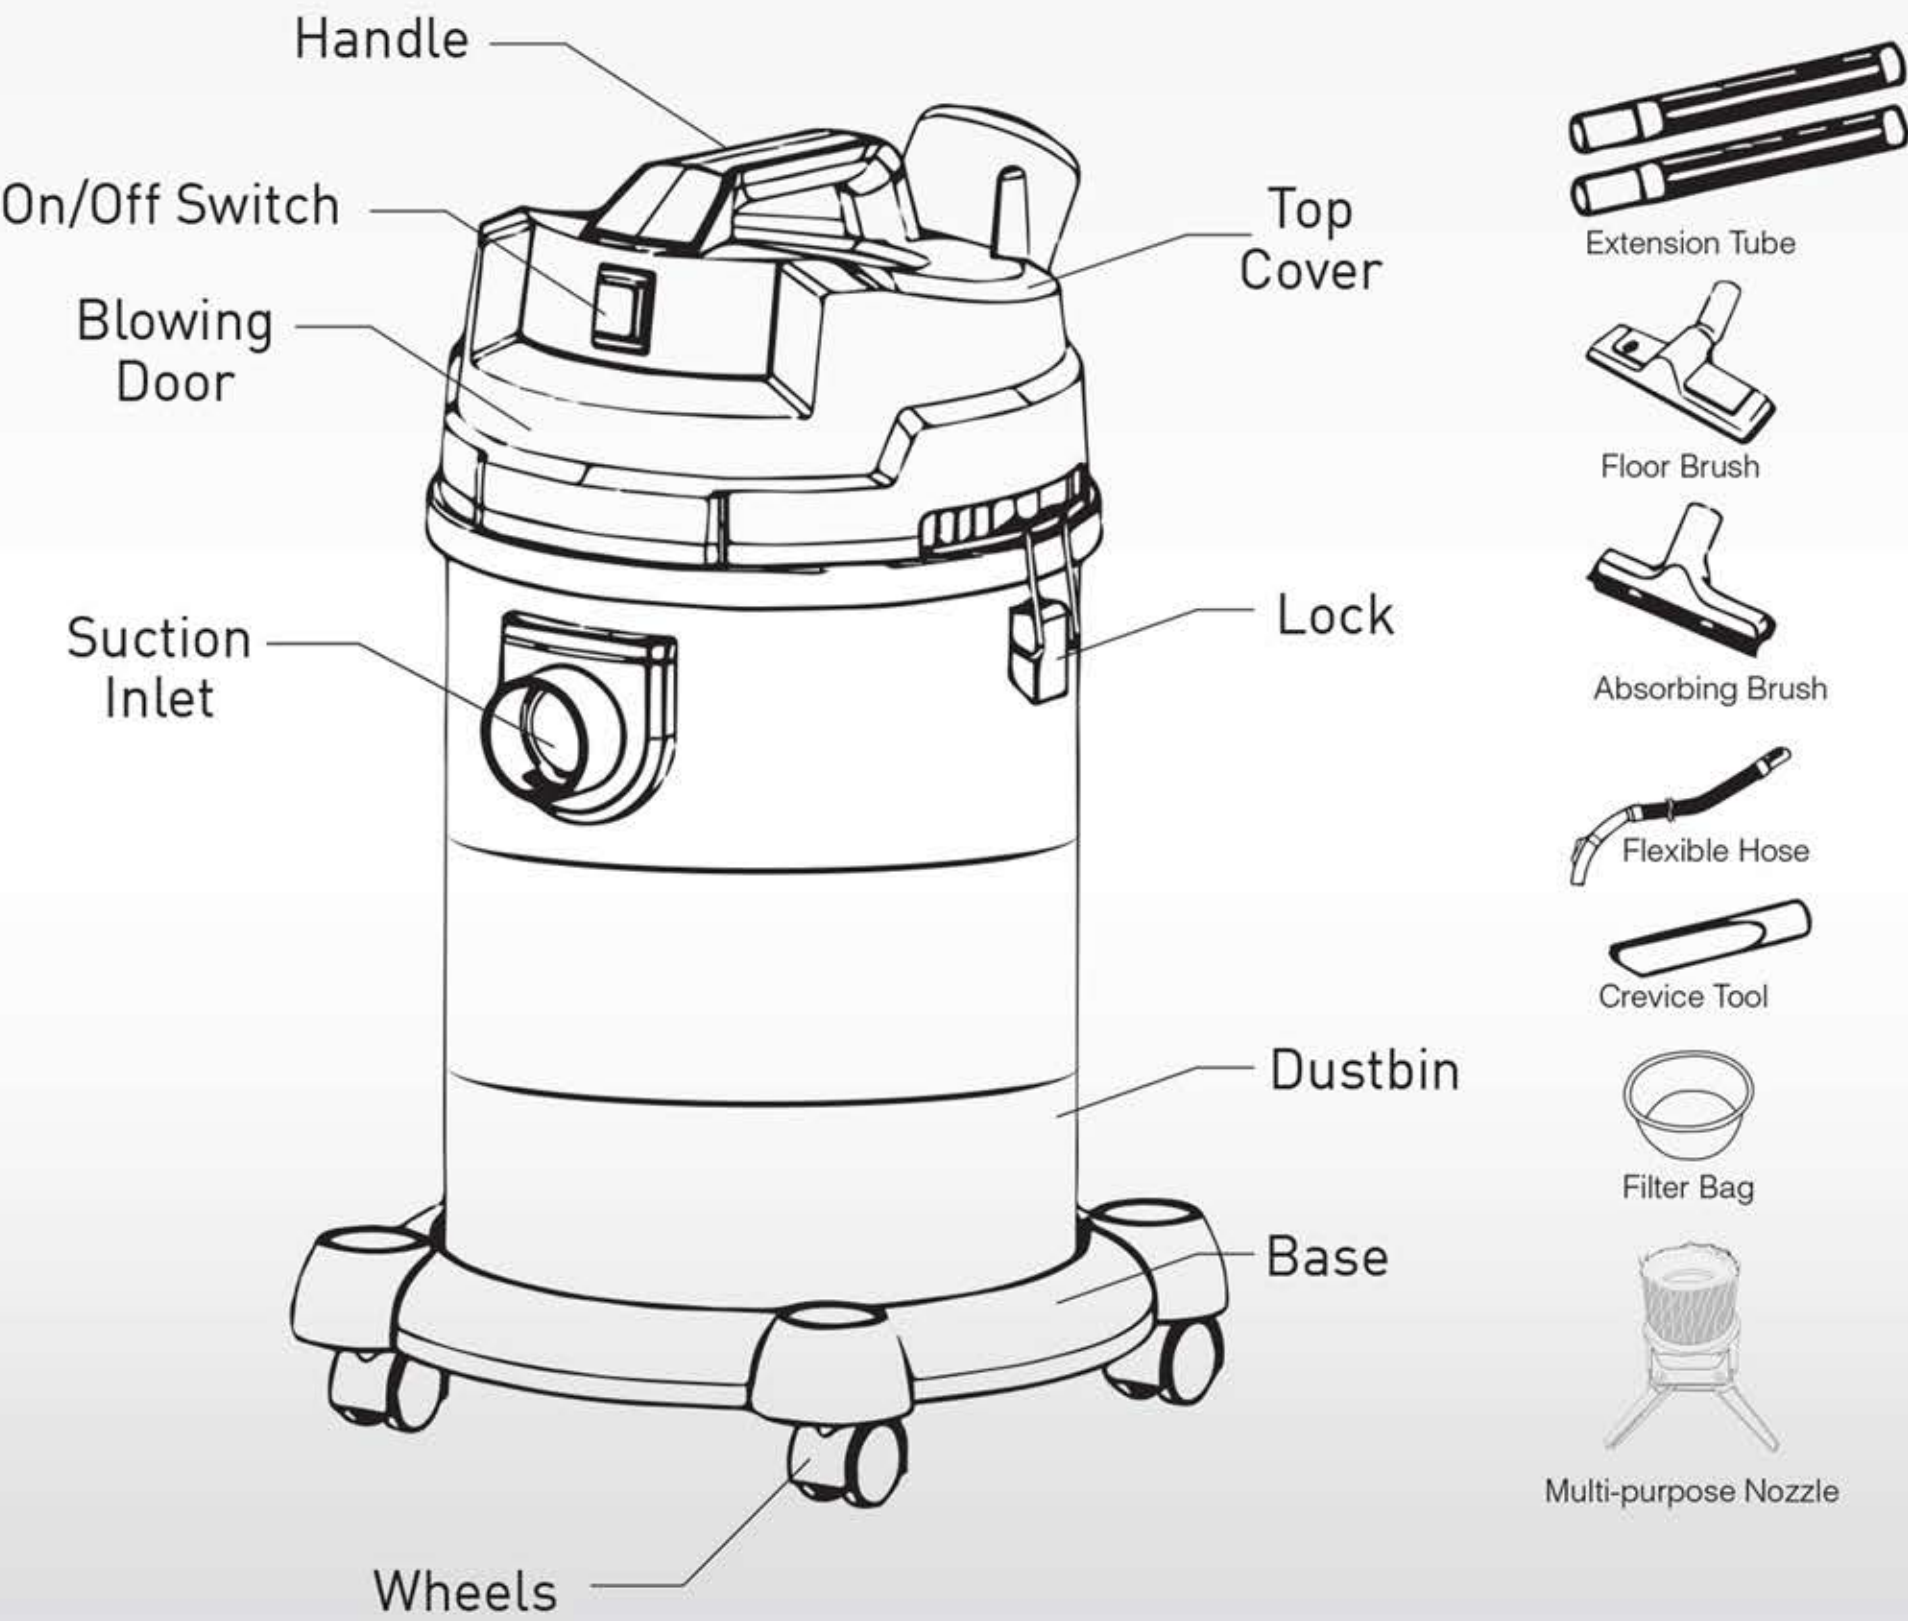

Items in the Box

1. KENT Wet & Dry Vacuum Cleaner 30L	:	01 No.
2. Flexible Hose	:	01 No.
3. Extension Tube	:	01 No.
4. Crevice Tool	:	01 No.
5. Multi Purpose Nozzle	:	01 No.
6. Floor Brush	:	01 No.
7. Absorbing Brush	:	01 No.
8. Filter Bag	:	01 No.
9. User Manual	:	01 No.


Assembling Your KENT Wet & Dry Vacuum Cleaner 30L

1. Unpack the unit completely and remove any stickers that can prevent unit operation.
2. Check the unit for damages. Do not use it in case of any damages.
3. Before switching on the unit, make sure that your home mains voltage corresponds to the unit operating voltage.

Attaching/ Detaching the Flexible Hose

a. Attaching

 
1. Attach the flexible hose in the air intake duct on the appliance, press until it clicks into position.
2. The grooves on the flexible hose cap must be aligned properly.

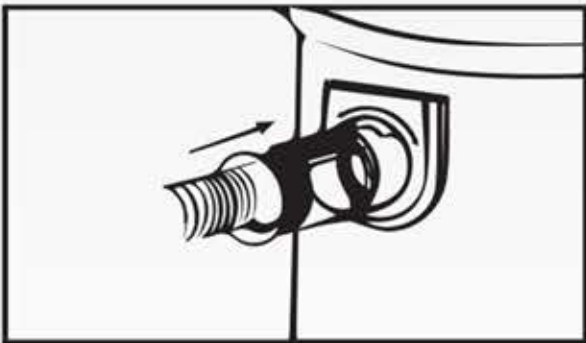

Attaching

b. Detaching

 1. To detach the flexible hose from the air intake duct, rotate counter-clockwise and pull out.

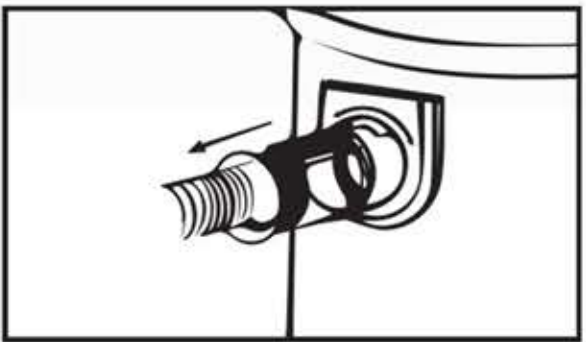

Detaching

Attaching/ Detaching Extension Tube

Attaching

- Attach the extension tube to the handle by pushing it in the direction as shown in the figure.

Detaching

- To detach it, pull in the reverse direction of the arrow.



 
 
Attaching/ Detaching Absorbing Brush & Floor Brush

Attaching

- Attach the Absorbing Brush to the extension tube in the direction of the arrow.

Detaching


- You can detach the extension tube from the Absorbing Brush by pulling it.

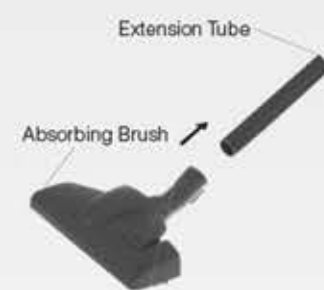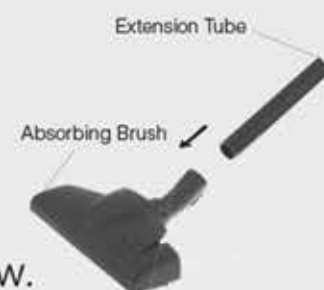

Using the Appliance

1. Ready for use connection

 - Insert the flexible tube in to the air intake duct. To do this, slide intake duct cover insert the tube and press until it clicks into the position.
- To remove it, press down the button and pull out the hose.
- To use the blow function, just need plug the hose into blowing door.
- Connect the flexible tube, extension tube and accessories correctly.

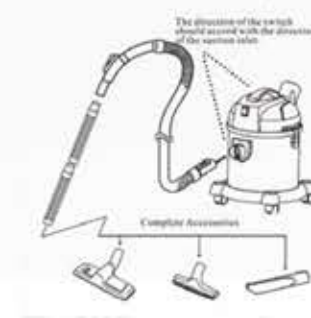

2. Switch on the appliance

- Before use please check the filter bag is installed. Do not work with no filter back.
- Press the ON/OFF button to switch the appliance on.
- Change the air power control knob on handle can adjust the suction. The greater air door, the smaller suction.



3. Please take off the dust bag when use for the water

Use of Accessories

Crevice Tool

 
- Your KENT Wet & Dry Vacuum Cleaner 30L comes with a crevice tools which are ideal for cleaning surfaces, which are otherwise difficult to clean, such as radiators, couch corners, under the couch and in between cushions.
- For cleaning corner edge and draws etc where is difficult to clean.
- For blowing the dust in the gap.

Floor Brush


- For cleaning the dust on hard floor or the carpet

Absorbing Brush

- For cleaning the water on hard floor or the carpet

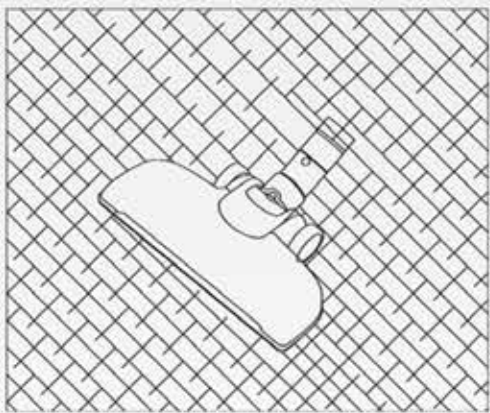

Carpet

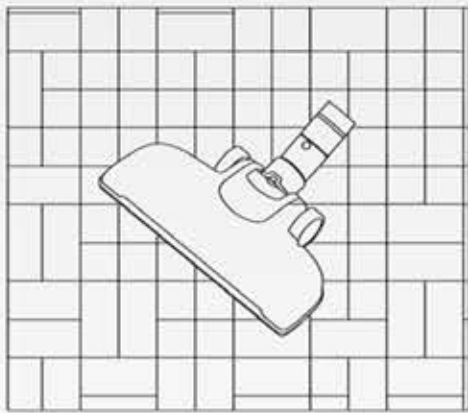 

Hard/ Wooden Floor



Absorbing Brush

Important Instructions

1. Do not operate the vacuum cleaner too close to heaters, radiators, cigarette butts, etc.
2. Do not plug or unplug the device with wet hands.
3. Before using the vacuum cleaner, remove large or sharp objects from the floor in order to prevent damage of the HEPA filter.
4. To unplug, do not pull the electrical cord, instead pull out the plug.



Note: If the suction pipe or extension tube is blocked, switch-off the vacuum cleaner at once. Unplug the appliance and clear the blockage. Once done, start the vacuum cleaner again.

Cleaning and Maintenance


1. Switch-off and unplug the appliance before cleaning it.

Note: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.


2. Cleaning Filters: Your KENT Wet & Dry Vacuum Cleaner comes with a washable foam and HEPA filters for effective dry and wet cleaning.

Removing and cleaning washable foam and HEPA filter

1. Remove the upper body assembly by opening the lock attached to the main body.

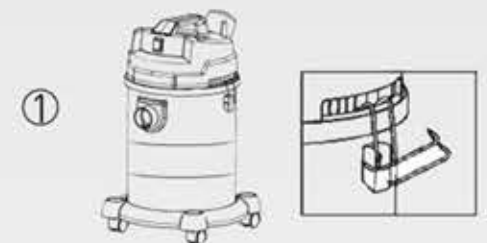


2. Gently pull the upper body to detach it from the main body.

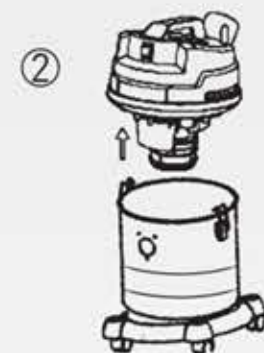


3. Gently remove the filter cartridge by rotating and pulling it out.

4. Detach the HEPA filter from the outer foam filter by pulling it out.

5. Rinse filters in lukewarm water and dry them completely.

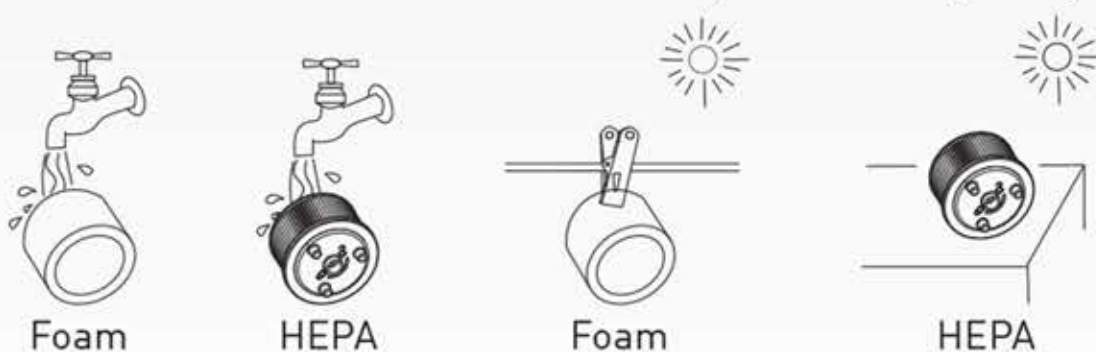

6. Once the filters are dry, put them back in reverse order.

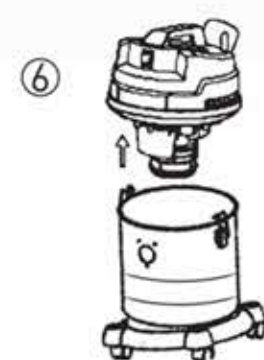

7. Filters should be cleaned at least twice in a year, or when it becomes visibly soiled.
8. Always operate the appliance with filters installed.
9. Always unplug the appliance before cleaning the filters.
10. Do not use washing machine to rinse filters.
11. Do not use a hair dryer to dry it.

Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Plug out the appliance when not in use.
- Keep the appliance out of the reach of children.

Important Safety Instructions

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Do not leave vacuum cleaner switched on when plugged in. Unplug, when not in use and before servicing.
2. Use the appliance only as described in the manual.
3. Always use manufacturer's recommended attachments only.
4. Do not use the appliance if the cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center.
6. Never use the cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep the cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug out the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn off all controls before unplugging.
11. Use extra precaution while cleaning stairs.
12. Do not use the appliance to pick any flammable or combustible liquids, such as gasoline, and also do not use in the areas where they may be present.
13. Unplug before connecting the hose.
14. Do not pick up anything that is burning or leaving smoke, such as cigarettes, matches, or hot ash.
15. Never use the appliance without the filter in place.
16. If the supply cord is damaged, it must be replaced by the manufacturer or a service agent, or a similarly qualified person, in order to avoid a hazard.
17. This appliance is suitable for indoor use only.
18. Keep away from the reach of children.
19. The appliance is not designed to be used by people who are physically or mentally disabled, mentally handicapped or lack the relevant experience and knowledge, unless a person responsible for their safety uses the product with supervision and guidance.
20. When there is water in the dust barrel, the float will be rise and the appliance would stop working. In addition you can hear abnormal sound. The power supply haven't been cut off yet at that time. So cut off the power supply immediately. And spill the water in the barrel. Restart the machine.
21. When the vacuum is overturned, the float will rise. In that case, cut off the power supply and upturn the vacuum.
22. If you run the vacuum or leave it alone while the float is risen, it may damage the motor and lead to fire.

Troubleshooting

Problem	Possible Cause	Possible Solutions
The appliance does not switch on.	<div><div>1. The power cord is not firmly plugged into the socket.</div><div>2. There's no power in the main supply.</div></div>	<div><div>1. Plug in the unit firmly.</div><div>2. Check the fuse or cutout switch. Replace fuse or reset the switch.</div><div>3. Call authorised service center.</div></div>
The appliance has weak suction power.	<div><div>1. The filters are blocked.</div></div>	<div><div>1. Switch off the cleaner and disconnect the cleaner from the main power supply.</div><div>2. Remove the filter and clean them.</div><div>3. Clean the remaining dust inside the dust canister and fitter cone.</div></div>
The hose or brush does not pick any dust.	<div><div>1. The hose is chocked or there's some blockage in the brush.</div></div>	<div><div>1. Switch off the cleaner and disconnect the cleaner from the main power supply.</div><div>2. Remove the hose and/or brush. Remove any blockage.</div></div>

Technical Specifications

Product	KENT Wet & Dry Vacuum Cleaner 30L
Product Code	16060
Net Weight	6.6 kg
Input Power Supply	Single Phase 220 V AC, 50-60 Hz.
Max. Vacuum Pressure	> 18 kPa
Airflow	> 1.8 m3/min
Noise (dB)	< 88 dB
Power Cord Length	4.5 m
Maximum Power	1200 W