

KENT EGG BOILER-W

Get perfectly boiled eggs without any hassle.

KENT

Smart Chef

Appliances

HOUSE of PURITY

Instruction Manual



Automatic Shut Down after Egg Boiling



Stainless Steel Heating Plate



Can Boil up to 7 Eggs



Can Boil as per Choice: Hard, Medium & Soft

7 Up to EGGS



Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to KENT!

At the outset, allow us to thank you for your trust in KENT Smart Chef Appliances. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with KENT Egg Boiler-W performance and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with the operation and maintenance.

With the robust build and high quality, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Bon Appétite!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT Egg Boiler-W	1
3. Know Your Product	1
4. Items in the Box	2
5. Using KENT Egg Boiler-W	2
6. Using Accessories	2
7. Procedure to Boil Eggs	3
8. Important Safety Instructions	5
9. Cleaning and Maintenance	5
10. Troubleshooting	6
11. Technical Specifications	7

 
INTRODUCTION

 
Presenting the all-new KENT Egg Boiler-W, to fulfill all your nutritional needs. A well designed appliance with stainless steel heating plate for faster boiling of eggs, be it at home, hostel room or when you are travelling.

FEATURES OF KENT EGG BOILER-W

1. Can Boil as per Choice - Hard, Medium, Soft
2. Stainless Steel Heating Plate
3. Can Boil up to 7 Eggs without any Cracks
4. Easy One Touch Operation
5. Automatic Power-off after Egg Boiling

KNOW YOUR PRODUCT

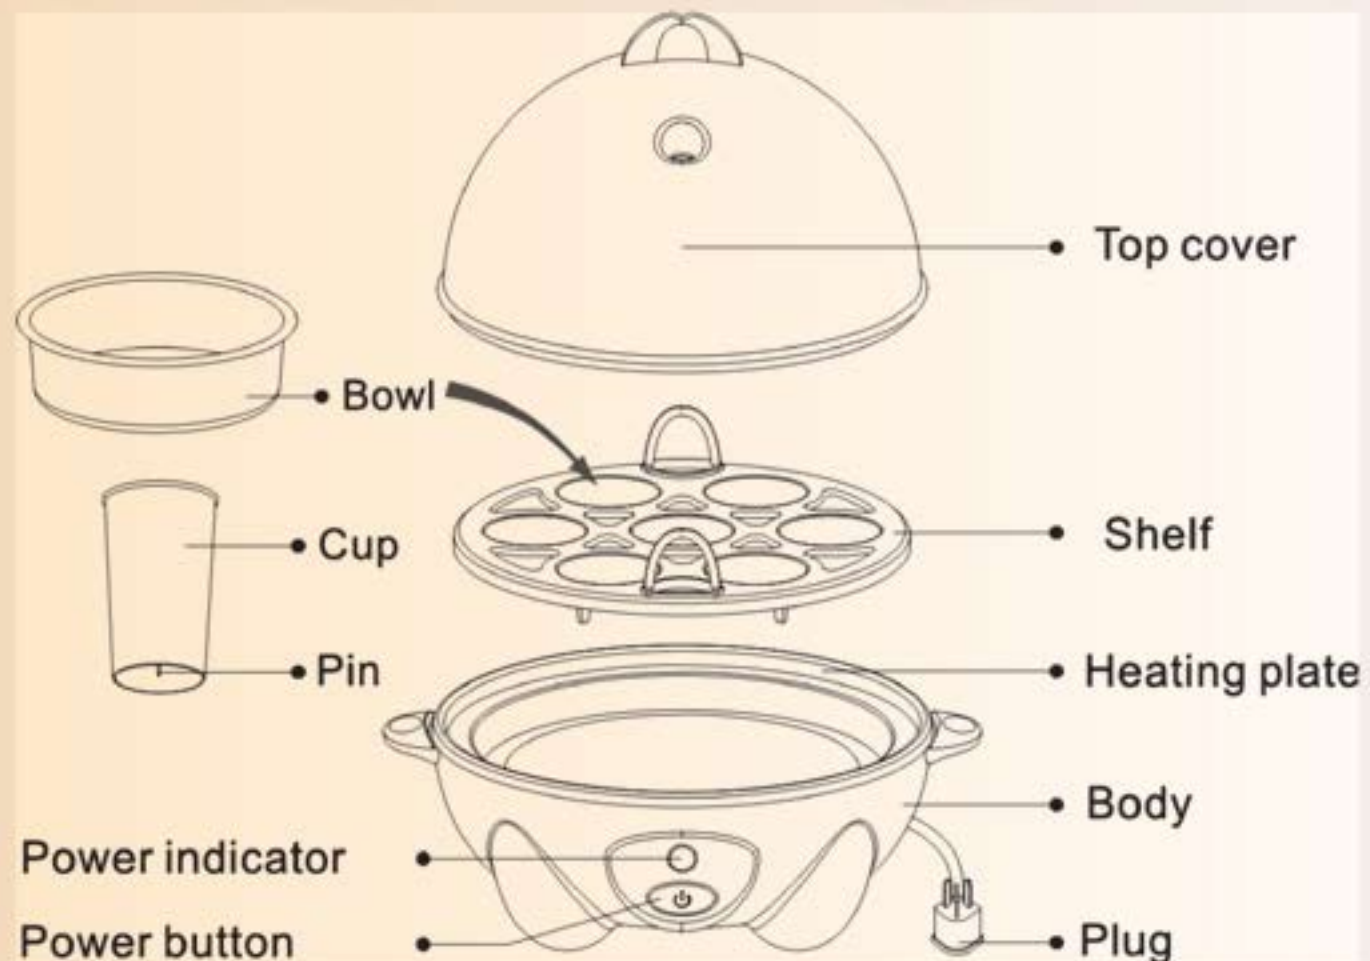

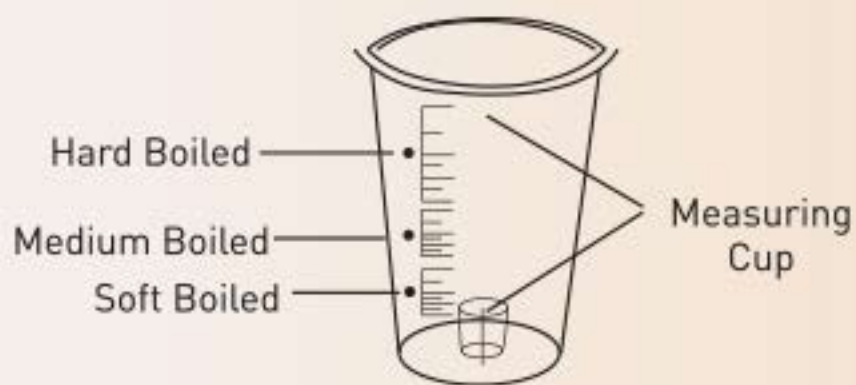

ITEMS IN THE BOX

- | | |
|----------------------|---------|
| 1. KENT Egg Boiler-W | : 1 No. |
| 2. Steaming Bowl | : 1 No. |
| 3. Egg Needle | : 1 No. |
| 4. Measuring Cup | : 1 No. |
| 5. User Manual | : 1 No. |

USING KENT EGG BOILER-W

1. Check the unit for damages. Do not use in case of any damage.
2. Before switching on the appliance, make sure that your home's main voltage corresponds to the operating unit.
3. Clean the parts of the KENT Egg Boiler-W thoroughly before using the appliance for the first time (see 'Cleaning & Maintenance' section).
4. Make sure that all parts are completely dry before you start using the appliance.
5. Shut the main power supply after the appliance is auto shut to avoid dry-boiling.

USING ACCESSORIES

1. Steaming bowl can be used for poached egg.
2. Egg needle is used to puncture the egg before we start boiling.

PROCEDURE TO BOIL EGGS

1. Place the Egg Boiler-W upright on a dry, sturdy and flat surface.
2. Fill the provided measuring cup with normal water depending on the desired hardness and the number of eggs, using the respective markings on the measuring cup or as per the table here. For example, if you want 4 medium boiled eggs, fill the water cup to the line that corresponds with the medium egg line and the number four. Pour water into the water tray.



Recommended Water Quantity to Boil Eggs

No. of Eggs	Hard (Water Quantity)	Medium (Water Quantity)	Soft (Water Quantity)
1	66ml	40 ml	33ml
2	64ml	37 ml	30ml
3	60ml	34 ml	27ml
4	56ml	31 ml	24ml
5	53ml	28ml	21ml
6&7	50ml	25ml	18ml

3. Pierce the blunt end of the eggs with an egg piercer, as it prevents the eggs from bursting or cracking during the boiling process.
4. Place the egg-holder on the boiler, and place the eggs. Close the lid once done.
5. Plug into the wall outlet and turn on by pushing the ON/OFF switch. The control light will illuminate.
6. When the eggs are ready, the light will turn off, but the product will have to be manually switched off.

7. If you plan to serve the eggs immediately, switch off the appliance. If you want to keep the eggs warm, leave the appliance switched on until you are ready to serve them.
8. Remove the egg-holder with the eggs from the water tray and hold them under normal water in case you want to serve them immediately after boiling. Switch off the appliance, otherwise the eggs will continue to boil and become harder.
9. After a short cool-down time of approximately 5 minutes, you may use the Egg Boiler-W again.
10. Unplug the appliance after use.

Caution:

- Use extreme caution as the stainless steel lid becomes extremely hot. Always use the handle to remove the lid.
- During use, the steam hole on the top of the lid gets very hot. Do not touch or cover steam hole when in use.

 
BOILING EGGS IN 6 EASY STEPS:



Add Water according to No. of Eggs




Pierce the Eggs

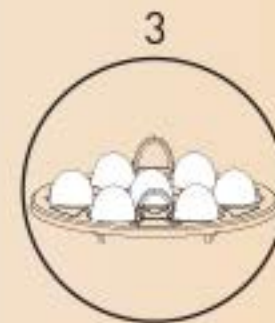

Add Required Number of Eggs



 Switch ON Egg Boiler-W

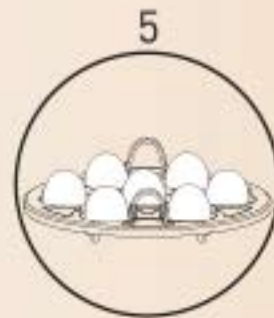

Get Perfectly Boiled Eggs



Switch OFF when Boiling Process is over

IMPORTANT SAFETY INSTRUCTIONS

1. Please keep children away when the unit is operating.
2. Avoid injuries by the egg needle.
3. Place the Egg Boiler-W on a flat surface.
4. Do not cover the top lid with any cloth or plate that might prevent steam to come out.
5. Do not add water or pull out the plug when the water on the plate has evaporated.
6. Do not touch the heating plate. Doing so might result in an injury.
7. Make sure the appliance is completely dry before using it.
8. Do not try to service the appliance on your own. Send it to an authorised service center only.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. This appliance is suitable for indoor use only.
11. Do not try to repair or alter the appliance on your own. It may cause appliance failure or breakdown.

CLEANING & MAINTENANCE

1. Always unplug the appliance before cleaning it.
2. Wait until the Egg Boiler-W has cooled down sufficiently, before cleaning it.
3. To wash, do not immerse the appliance in water.
4. Clean and wipe the appliance after every use.
5. Deodorise or descaling: Add a few drops of lemon when product has cooled down and not in use, then clean it with a moist cloth to remove stain/scales from the steel plate.
6. When not in use for a long time, unplug it and store it in a dry ventilated place.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Indicator light does not turn on.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The light is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
	The switch has not been pressed.	Switch on the appliance.
Eggs are over or under done.	Too much or too little water has been added.	Add water in right quantity as indicated in the manual.
The eggs are raw.	The boiling process has not started.	You have failed to press the button. Switch on the appliance.
	The heating element is damaged.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Product	KENT Egg Boiler-W
Product Code	16053
Net Weight	0.50 kg
Heating Plate	Stainless Steel
Product Dimensions (mm)	185 (L) x 155 (W) x 160 (H)
Maximum Capacity	7 Eggs
Power	360 W
Input Power Supply	Single phase 220-240 V AC, 50 Hz. ☐



HOUSE of PURITY



Innovations for
Better Living

Marketed by:

KENT RO SYSTEMS LTD.

A-6, Sector-87, Noida-201 305, U.P., India.

For customer complaints, contact our Customer Care Officer at:

E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.

Call: 92-789-12345 | E-mail: service@kent.co.in

Website: www.kent.co.in