



Marketed by:  
**KENT RO SYSTEMS LTD.**  
E-6, Sector-59, Noida, U.P.-201 309, India.  
E-mail: [sales@kent.co.in](mailto:sales@kent.co.in) | Website: [www.kent.co.in](http://www.kent.co.in)

Made in India

# KENT DIGITAL AIR FRYER 6.5L

MULTIPLE SNACKS WITH LESS OIL IN MINUTES



HOUSE of PURITY

## INSTRUCTION MANUAL



8 preset  
menu



Digital Display



Timer



Auto Shut-off



High speed air  
circulation



Cooks with 80%  
less oil

6.5L



1600W



# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At **KENT**, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT Digital Air Fryer 6.5L** and that it will serve you and your family's requirements without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarise yourself with operation and maintenance of the product.

With its robust build and quality, you can look forward to years of trouble-free services.

In case you require any further information, please contact your nearest KENT dealer or branch.

Happy Living!

KENT RO Systems Ltd.

## TABLE OF CONTENTS

1. Introduction .....	1
2. Features of KENT Digital Air Fryer 6.5L.....	1
3. Items in the box .....	1
4. Know your product .....	2
5. Before first use .....	2
6. General procedure and operation instructions .....	3
7. How to use .....	3
8. Display screen .....	4
9. Caution.....	5
10. Cleaning and maintenance.....	5
11. Important safety instruction.....	5
12. Troubleshooting.....	7
13. Technical specification .....	7

## INTRODUCTION

We, at KENT have always believed that a clean and healthy life is a right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water we drink, vegetables and fruits we eat, homes we live in, and the air we breathe.

Use of innovative technologies and support from a competent service network have enabled us to create a brand which has become synonymous for well-being and health. Continuing with the tradition, we now present the KENT Digital Air Fryer 6.5L, your ultimate kitchen companion for healthier meals.

With its 6.5-litre large capacity and rapid air technology, cooks family-sized portions with up to 80% less oil. The glass window with a light feature helps monitor food easily. Enjoy convenience with digital controls and preset functions. Upgrade to healthier, tastier cooking with the KENT Digital Air Fryer 6.5L.

## FEATURES OF KENT DIGITAL AIR FRYER 6.5L

- 8 Preset Menu
- Digital Display with Touch Screen Control Panel
- Up to 80% less oil usage
- Electronic Timer & Temperature Control
- High speed air circulation
- Comes with a Glass Window with in-built Light

## ITEMS IN THE BOX

1. KENT Digital Air Fryer 6.5L : 1N
2. Inner Tray : 1N
3. Pan with Handle : 1N
4. Warranty Card : 1N

## KNOW YOUR PRODUCT



1. Digital Display
2. Glass Window
3. Inner Tray
4. Basket
5. Handle

## BEFORE FIRST USE

1. Please read the instructions carefully.
2. Take out all the accessories and the air fryer from the packing box.
3. Clean the frying bucket with clean water and wipe the air fryer's interior with a soft, damp cloth. Ensure it's completely dry before use.
4. There should be at least 20cm of clearance between the air fryer and any surrounding objects, and no items should be placed on top of the air fryer.
5. Before first use, preheat the air fryer to its maximum temperature for 10-15 minutes to burn off any residual manufacturing oils from the heating element. Note that mild smoke may occur during initial use.

## GENERAL PROCEDURE AND OPERATION INSTRUCTIONS

1. Place the basket in the horizontal position and place the inner tray into the basket.
2. Spread the food to be cooked evenly in the basket, and then push the basket into the product host.







**Note:** • The basket should be pushed in place, otherwise the product will not be energized  
• Do not add more than three-quarters of the food in the basket.

3. After the fryer is installed, connect the product to the power supply. According to the cooking time and temperature required for the food, the air fryer can be started.
4. When the cooking time is over, five beeps will be made to indicate that the work is completed, which means that the food has been cooked. After slightly cooling, the food in the basket can be transferred to a plate or bowl.

**Note:** Do not turn the basket upside down with the food together, because there will be excess oil in the basket, which will make the oil mixed on the food.

5. Unplug the power supply and clean the product after it has cooled

## HOW TO USE

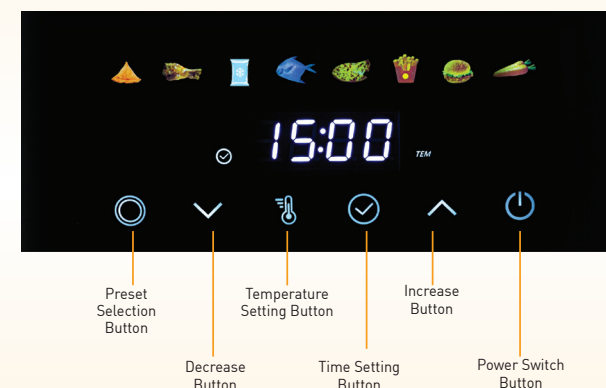
1. When the power switch is turned on, the buzzer beeps, the screen lights up briefly before going off after a second, and the shutdown button starts flashing, indicating the machine has entered standby mode.
2. **Power-on start button:**   
Press this key to enter the setting state, the Power On LED Display alternately displays the default menu temperature and time.
3. **Temperature setting button:**   
Press this button to enter the temperature setting.
4. **Time setting button:**   
Press this button to enter the time setting.
5. **Increase button:**   
This button has multiple functions. For temperature settings, pressing this button increases the temperature by 5°C. For time settings, it increases the time by 1 minute. Additionally, long-pressing the button for 3 seconds allows for fast-forward increase.
6. **The Decrease button:**   
This button adjusts settings in two key areas. For temperature settings, each press decreases the temperature by 5°C. For time settings, it reduces the time by 1 minute. A long press of this button enables fast-forward decrease, allowing for quicker adjustments.
7. **Preset selection button:**   
This button allows you to select a menu, which is indicated by the corresponding menu light flashing. Each menu has specific temperature and time settings. Once you've selected a menu and pressed the start button, the chosen menu light will stay on while







 

the others turn off, and the digital display will alternately show the set temperature and time. Additionally, long-pressing this button toggles the furnace lamp on or off.

### 8. Other Functions:

The device also features automatic recovery and shutdown functions. In the event of a power failure, the machine will automatically restore its previous working state within 2 seconds of the power being restored. Additionally, during operation, pressing the shutdown button immediately stops the heating element and furnace lamp, while the fan continues running for a short period before turning off.

## DISPLAY SCREEN:



S. No	Preset Button		Default Temperature	Default Time
1.	Samosa		200 °C	15-17 min
2.	Drumstick		200 °C	25-30 min
3.	Frozen Food		200 °C	12-15 min
4.	Roast Fish		180 °C	15-20 min
5.	Pizza		160 °C	12-15 min
6.	French Fries		200 °C	18-25 min
7.	Burger		180 °C	7-14 min
8.	Vegetables		160 °C	8-10 min

## CAUTION

- If you put too much food, it is recommended that halfway through the baking time, pull out the basket and shake the food, and then push the basket back into the machine for cooking, so that the food is evenly cooked.
- Do not use plastic or paper in the air fryer.
- Set the time and temperature according to the size, thickness, recipe, or personal preference.
- Before cooking the food, it is recommended to preheat the air fryer for 3 minutes.
- The above preset menu is a reference; please cook according to your personal taste and the actual situation of the food.

## CLEANING AND MAINTENANCE

1. Before cleaning the air fryer, unplug the power plug and let the air fryer cool completely.
2. The inner and outer surfaces of the air fryer, frying bucket, and baking pan can be cleaned with a soft cotton cloth or sponge stained with neutral detergent, and then wiped with clean water.
3. Do not use hard brushes and abrasive articles to avoid damaging the inner surface of the air fryer and the protective layer of the frying drum and baking pan.
4. Never use gasoline, thinner, polish, or other toxic and corrosive cleaners for cleaning.
5. Before using the air fryer, ensure the cleaned parts are completely dry before plugging in.
6. Please do not wipe the heating tube; it will clean itself.
7. Do not immerse the air fryer in water or other liquids.
8. After using the air fryer, remove the basket first to easily clean the inner tray and basket.

## IMPORTANT SAFETY INSTRUCTIONS

**Warning:** To avoid harm caused by misuse, read the instruction manual carefully before using the product, and use it strictly according to the purpose specified in the manual. This Safety Note contains important information to enable you to use the product safely and correctly, and to prevent personal injury or property damage to you or others. Keep it properly after reading, so that all users of this product can refer to it at any time.

1. This product belongs to Class I appliances; please use a 10A or above socket alone and ensure that the socket is grounded before use. Also, confirm that the input power supply is 220-240V ~ 50-60Hz.

2. The product belongs to high-power electrical appliances; it is strictly prohibited to use a flexible wire mobile socket, and it is strictly prohibited to share a socket with other electrical appliances.
3. The appliance cannot operate with an external timer, temperature controller, or independent remote control system.
4. If the power cord is damaged, it must be replaced.
5. Do not pull or hang the cord over sharp edges or near heat sources and wet sources; do not insert metal into the cooling holes or gaps, as this may cause damage or electric shock risk.
6. If the power cord and plug are damaged or the product fails, please ensure to avoid danger.
7. Never pull the power cord; please pull out the plug before moving the product. Do not immerse the power cord, plug, or product in water or other liquids to prevent electric shock.
8. It is strictly prohibited to place any items on top of the air fryer. It is strictly prohibited to cover or block the heat dissipation level of the air fryer to avoid causing a fire.
9. It is strictly forbidden to place closed containers in the air fryer, as this may cause an explosion.
10. It is strictly prohibited to place the air fryer near flammable or heat sources. Pay attention to staying away from curtains or similar items to prevent fires.
11. The air fryer should be placed in a dry environment and should not be used outdoors.
12. Place the air fryer on an insulated plane for use and maintain a distance of at least 20cm around the air fryer.
13. To avoid fires caused by lampblack pollution or heat during product operation, keep the product at a certain distance from walls, cabinets, and flammable articles.
14. The use of this product is strictly prohibited for children and individuals with unsound limbs, sensory or mental disorders, or a lack of relevant experience and knowledge. If there are children nearby, extra caution must be exercised when using this product. Do not place this product within the reach of small children.
15. Do not damage, excessively bend, stretch, or twist the power cord, and do not put heavy objects on or clamp them on the power cord.
16. When the air fryer is used or not used for a long time, pull the plug out from the socket to avoid electric shock due to insulation aging.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
The power supply Indicator ring is not lit up	Power cut	Check and maintain the power supply equipment
	Power socket not powered or poor contact	
	The power supply voltage does not match the product rated voltage	
Uncooked / burnt food	The selected baking time is at the wrong temperature	Integrated recipes and personal experience to set the cooking time and temperature
Smoke comes out after the first use	Anti-rust oil left on the heating tube of the air fryer	Adjust the temperature to the maximum and pre-heat for 10-15 minutes to remove the rust oil from heating tube
Foul odour	Foreign body on the basket, or heating tube	Clean out the outside of the body

## TECHNICAL SPECIFICATION

Product	KENT Digital Air Fryer 6.5L
Product code	116175
Net Weight	4.75 kg
Input Power Supply	Single Phase 230V AC, 50 Hz, Class 1
Power Consumption	1600 W
Product Dimensions	391.5 (L) x 286 (W) x 337 (H) mm
IP Rating	IPX0