



Marketed by:
KENT RO SYSTEMS LTD.
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India
E-mail: sales@kent.co.in

Manufactured by:
Tulika Appliances Pvt. LTD, Plot No. 191A, Sector - 4,
I M T Manesar, Gurgaon 122052

For Customer Complaints, Contact our Customer Care Officer at:
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India Call: 92-789-12345
E-mail: service@kent.co.in or visit us at www.kent.co.in
Made in India

KENT DYNA MIXER GRINDER —H

ADD POWER AND PERFORMANCE TO YOUR KITCHEN

Instruction Manual



**HIGH-SPEED
& PERFORMANCE**

500W



3 SS JARS

- 1.2 L SS Liquidising Jar
- 0.7 L SS Dry Grinding Jar
- 0.4 L SS Chutney Jar

Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**.

At the outset, allow us to thank you for your trust in **KENT Smart Chef Appliances**. At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with **KENT DYNA's** performance and that it will serve you and your family's need without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarise yourself with the operation and maintenance.

With the robust quality, you can look forward to years of trouble-free service.

In case you require any further information, please contact your nearest **KENT** dealer or branch.

Bon Appetit!

KENT RO Systems Ltd.

TABLE OF CONTENTS

1. Introduction	1
2. Features of KENT DYNA	1
3. Know Your Product	1
4. Items in the Box	2
5. Using KENT DYNA	2
6. How to Operate	2
7. Cleaning and Maintenance	3
8. Precautions	4
9. Important Safety Instructions	4
10. Troubleshooting	5
11. Technical Specifications	6

INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is the right of every individual. This ethos is what made us embark on the journey to develop innovative solutions for purifying the water that we drink, the vegetables and fruits that we eat, the homes that we live in and the air that we breathe.

With the use of innovative technology and the support of a competent service network, we have been able to create a brand which has become synonymous with well-being and health. Continuing with this tradition, we now present the KENT DYNA, a new age high-speed mixer cum blender for home that works like magic.

KENT DYNA Mixer Grinder with its high power 500W motor is here to become an all-in-one appliance for your kitchen. It doesn't just blend fruits and vegetables but it can also easily grind coffee beans and mix spices perfectly with its high quality stainless-steel blades. Besides this, its 3 stainless-steel jars along with spill proof lids will ensure a leak-free grinding experience. You can also control the speed as per your needs because it has 3 speed control with pulse function. So, go ahead, add a perfect blend of health, taste, and convenience to your everyday kitchen chores with KENT DYNA.

Above all, it saves time by taking care of food preparations smartly in minutes!

FEATURES OF KENT DYNA

- Powerful 500 W motor
- Made with high quality food grade stainless-steel jars and blades for hygienic operations and durability
- Ideal for blending fruits & vegetables, grinding coffee beans & mixing spices
- 3 speed control with pulse function
- Spill proof lids
- Auto switch off for overheating/overload protection

KNOW YOUR PRODUCT



ITEMS IN THE BOX

- | | | |
|---------------------------------------|---|-----|
| 1. KENT DYNA Mixer Grinder | : | 1 N |
| 2. SS Liquidising Jar With Lid 1.2 L | : | 1 N |
| 3. SS Dry Grinding Jar With Lid 0.7 L | : | 1 N |
| 4. SS Chutney Jar With Lid 0.4 L | : | 1 N |
| 5. Spatula | : | 1 N |
| 6. User Manual | : | 1 N |

USING KENT MARVEL

1. Remove any stickers that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damages.
3. Before switching on the appliance, make sure that your home's main voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT DYNA before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

HOW TO OPERATE

1. Ensure power switch is in off position before placing the jar on the main unit.
2. Add desired ingredients.
3. Place the lid on top of the jar and secure it tightly.
4. Plug in and switch it on (keep hand on the lid while operation).
5. Once done, please clean the appliance before storing it.

MODES

Blending Mode

1. Put food and liquid in the SS Liquidising Jar.
2. Put the lid on the SS Jar and secure it tightly.
3. Place the SS Jar on the main unit.
4. Switch 'ON'. Use desired speeds as described.
 - 1 – Low speed: Most suited for blending or shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushing
 - P – Pulse use: Most suited for shorter bursts of blending and for crushing ice
 - 0 – Off
5. Once finished, turn off and unplug it.
6. Remove the SS Jar by rotating and lifting.

Grinding Mode

- 1. Fill the jar with ingredients (not more than 50% of the capacity) and screw back to the base.
- 2. Put the lid on the SS Jar and secure it tightly.
- 3. Place the Jar on the main unit.
- 4. Switch 'ON'. Use desired speeds as described.
 - 1 – Low speed: Most suited for blending or shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushing
 - P – Pulse use: Most suited for shorter bursts of blending and for crushing ice
 - 0 – Off
- 5. Once finished, turn off and unplug it.
- 6. Remove the SS Jar by rotating and lifting.

Chutney Mode

- 1. Fill the jar with ingredients (not more than 50% of the capacity) and screw back to the base.
- 2. Place the SS Jar on the main unit.
- 3. Switch 'ON'. Use desired speeds as described.
 - 1 – Low speed: Most suited for blending or shakes
 - 2 – Medium speed
 - 3 – High speed: Most suited for grinding and crushing
 - P – Pulse use: Most suited for shorter bursts of blending and for crushing ice
 - 0 – Off
- 4. Once finished, turn off and unplug it.
- 5. Remove the SS Jar by ratating and lifting.

CLEANING & MAINTENANCE

- Switch off and unplug the appliance before cleaning it.
- Remove the lid and clean the jar with warm water and soap solution with the help of a cleaning brush. Never use scouring pads to clean.
- Wipe the main unit with a moist cloth and a non-abrasive liquid cleaner.
- Do not immerse the appliance in water or any other liquid.
- Never put any part of the appliance in the dishwasher.
- After cleaning it thoroughly, dry it using a soft cloth.
- Ensure that the appliance is completely dry before storing it.

Note: Never immerse the main unit of the grinder in water, nor rinse it under the tap.

PRECAUTIONS

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating, it might damage the appliance.
- Unplug before cleaning / moving the appliance.
- Do not use the appliance with a damaged power cord or plug.
- Do not use the appliance near any heat source.
- If the appliance is not used for a long time, unplug it.
- Do not use the appliance when it is in a recumbent or inclined position.
- Do not operate the jar without the lid on them.
- Chop food before putting them in to the mixer jar for better crushing.
- While making chutneys or any paste – please put hand on top of the lid to avoid spilling of the liquid.
- To avoid overheating of the product - use it for 5 mins, let it rest for 2 mins & continue the process accordingly to get desired results.
- In case of overheat, turn the knob off and let it rest for 20 mins and push the button at the base of the machine and restart.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the below mentioned:

- 1. Unplug, when not in use and before servicing.
- 2. Always increase the speed gradually a) Low speed – 30s, b) Medium speed – 60s, c) High speed – 90s.
- 3. To reduce the risk of electric shocks, do not use near or on wet surfaces.
- 4. Use the appliance only as described in the manual.
- 5. Do not use the appliance if the cord or the plug is damaged or worn out. Replace the damaged cord or plug immediately.
- 6. Do not try to service the appliance on your own. Send it to an authorised service center only.
- 7. Keep the cord away from heated surfaces.
- 8. Do not unplug the appliance by pulling the cord. Always unplug by pulling out the plug.
- 9. To avoid electric shocks, do not use the appliance with wet hands.
- 10. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
- 11. Turn all controls off before unplugging.
- 12. This appliance is suitable for indoor use only.
- 13. Keep away from children & differently abled people.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance suddenly stops working while running.	The appliance has overheated.	Let the appliance cool down for 20 - 30 minutes.
	The appliance is overloaded.	Remove some ingredients, add some water and try again.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
The appliance makes a lot of noise.	The jar is not placed properly.	Reposition the jar in the correct position.
	The blender's inner drive is broken.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.
Motor does not work properly.	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest KENT authorised service centre for assistance.

TECHNICAL SPECIFICATIONS

Product	KENT DYNA Mixer Grinder
Product Code	116108
Product Generic Name	Mixer Grinder
Net Weight	2.65 kg
Input Power Supply	Single Phase 230 V AC, 50 Hz.☐, Insulation Class F
Total Power Consumption	500 W
SS Liquidising Jar	1.2 L
SS Dry Grinding Jar	0.7 L
SS Chutney Jar	0.4 L