

# KENT POP-UP TOASTER-RED For Perfect & Crispy Toasts



HOUSE of PURITY

## Instruction Manual



Removable  
Crumb Tray



HOUSE of PURITY

Marketed by: **KENT RO SYSTEMS LTD.**  
E-6, Sector-59, Noida, U.P.- 201 309, India.  
E-mail: [sales@kent.co.in](mailto:sales@kent.co.in) | Website: [www.kent.co.in](http://www.kent.co.in)

Manufactured by: **KENT RO SYSTEMS LTD.**  
A-7, Sector-87, Noida-201 305, U.P., India.

For customer complaints, contact our Customer Care Officer at:  
E-6, Sector-59, Noida, U.P.- 201 309, India. Call: 92-789-12345  
E-mail: [service@kent.co.in](mailto:service@kent.co.in) or visit us at [www.kent.co.in](http://www.kent.co.in)

Made in India



AUTOMATIC  
POP-UP



7 HEATING  
MODES



REHEAT  
FUNCTION



DEFROST  
FUNCTION



CANCEL  
FUNCTION



COOL TOUCH  
BODY

# Welcome to KENT

Dear Customer,

Congratulations on your purchase and welcome to **KENT**!

At the outset, allow us to thank you for your trust in KENT Smart Chef Appliances.

At KENT, we take pride in our reputation for quality products and industry proven performance. We are certain that you will be more than satisfied with

**KENT Pop-up Toaster - Red** and that it will serve you and your family's needs without any compromise.

This guide will help you in getting the best out of your appliance. Please go through the booklet to familiarize yourself with the operation and the maintenance of the product.

With its robust and high quality build, you can look forward to years of trouble-free service.

To ensure that the warranty of your appliance is effective, it is important that you fill the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Bon Appétit!

KENT RO Systems Ltd.

## TABLE OF CONTENTS

1. Introduction.....	1
2. Features of KENT Pop-Up Toaster-Red.....	1
3. Know Your Product.....	1
4. Items in the Box .....	2
5. Using KENT Pop-Up Toaster-Red .....	2
6. How to operate .....	2
7. Cleaning and maintenance .....	2
8. Precautions .....	3
9. Important Safety Instruction .....	3
10. Technical Specifications .....	4

## INTRODUCTION

We, at KENT, have always believed that a clean and healthy life is every individual's right. This ethos is what made us embark on a journey to develop innovative solutions for purifying the water that we drink, vegetables and fruits that we eat, homes that we live in and the air that we breathe.

With the use of innovative technology and supported by a competent service network, we have been able to create a brand which has become synonymous with well-being and health. Continuing with the tradition, we now present the KENT Pop-up Toaster-Red, a new age kitchen aid to make the perfect toasts from the comfort of your home. KENT Pop-up Toaster-Red is so easy to use that you'll put it to work every single day.

## FEATURES OF KENT POP-UP TOASTER - RED

1. Defrost: Defrost frozen bread slices easily in one step.
2. Reheat: Toasts aren't warm anymore? That's okay! Reheat them instantly.
3. Cancel function: You can cancel the toasting process at any time.
4. 7 Heating Modes: Achieve the desired colour and crispiness for your toasts easily.
5. Removable crumb tray: Cleaning your toaster is now simple. Remove the tray, clean it and slide it back in place.
6. With wide slots, you can easily cook up to 2 slices at a time.
7. Easy to use, clean and store.
8. Automatic Pop-up with Anti-Jam Function.
9. Cool-touch body.

## KNOW YOUR PRODUCT



## ITEMS IN THE BOX

1. KENT Pop-up Toaster - Red : 1 N
2. Crumb Tray : 1 N
3. Warranty Card : 1 N

## USING KENT POP-UP TOASTER - RED

1. Remove any stickers that might prevent normal operations .
2. Check the unit for damages. Do not use in case of any damages .
3. Before switching on the appliance, make sure that your home mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the KENT Pop-up Toaster -Red before using.
5. Make sure all parts are completely dry before you start using the appliance.

## HOW TO OPERATE

1. Clean the toaster before using.
2. Plug in the appliance and let it preheat for 2-3 minutes. Choose the desired setting as per choice.
3. Once heated, put the bread slices and press the lever down.
4. The bread will start to toast.
5. Once the bread is toasted, the pop up toaster would automatically eject it.
6. After cooking, unplug and let it cool before cleaning and storing.

## CLEANING & MAINTENANCE

1. Switch off and unplug the appliance before cleaning it.
2. Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
3. Do not immerse the appliance in water or any other liquid.
4. Never put any part of the appliance in the dishwasher.
5. After cleaning it thoroughly, dry it using a soft cloth.
6. Ensure that the appliance is completely dry before storing it. Never immerse the unit in water, or rinse it under the tap. Wipe it with a dry cloth.

## PRECAUTIONS

1. Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
2. The input voltage must not exceed the rating; it might damage the appliance.
3. Unplug before cleaning / moving the appliance.
4. Do not use the appliance with a damaged power cord or plug.
5. If the appliance is not being used for a long time, unplug it.
6. Do not use the machine when it is in a recumbent or inclined position.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Unplug, when not in use and before servicing.
2. After using, unplug and let it cool before cleaning and storing.
3. To reduce the risk of electric shock, do not use near or on wet surfaces.
4. Use the appliance only as described in the manual.
5. Do not use the appliance if the cord or plug is damaged or worn out.  
Replace the damaged cord or plug immediately.
6. Do not try to service the appliance on your own. Send it to an authorized service center only.
7. Keep cord away from heated surfaces.
8. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
9. To avoid electric shocks, do not use the appliance with wet hands.
10. Keep hair, loose clothing, fingers and all parts of the body away from moving parts.
11. Turn all controls off before unplugging.
12. This appliance is suitable for Indoor use only.
13. Keep away from children.

## TECHNICAL SPECIFICATION

Product	KENT Pop-up Toaster- Red
Product code	116167
Net Weight	1.03 kg
Input Power Supply	Single Phase 220-240 V AC, 50 Hz.
Power Consumption	850 W
Product Dimensions	280 (L) x 172 (W) x 187 (H) mm