

# KENT WET & DRY Vacuum Cleaner



HOUSE of PURITY

## Instruction Manual



New Age  
Pure Cleaning  
Healthy Living

# Welcome to KENT

Dear Customer,

At the outset, allow us to thank you for your trust in KENT Wet & Dry Vacuum Cleaner. At KENT, we take pride in our reputation for product quality and industry proven performance. We are certain that your decision to own KENT Wet & Dry Vacuum Cleaner will go a long way towards keeping you and your family in good health. We are confident that you will be more than satisfied with its performance and it will serve your need for a safer and cleaner living, without any compromise.

This guide would help you in getting the best out of your KENT Wet & Dry Vacuum Cleaner. Please go through the booklet to familiarize yourself with its proper operation and maintenance. So that you can look forward to years of trouble-free service. To ensure that the warranty of your KENT Wet & Dry Vacuum Cleaner is effective, it is important that you fill up the enclosed warranty card and mail it to us within 15 days of purchase.

In case you require any further information, please contact your nearest KENT dealer or branch.

Happy Cleaning,

**KENT RO Systems Ltd.**

## Table of Contents

1.	Introduction .....	1
2.	Features of KENT Wet & Dry Vacuum Cleaner .....	1
3.	Know Your Product .....	1
4.	Items in the Box .....	2
5.	Assembling your KENT Wet & Dry Vacuum Cleaner .....	2
6.	Using the Appliance .....	3
7.	Important Instructions .....	4
8.	Cleaning and Maintenance .....	5
9.	Important Safety Instructions .....	6
10.	Troubleshooting .....	7
11.	Technical Specifications .....	7

## Introduction

We, at KENT have always believed that a clean and healthy life is the right of every individual. This ethos made us embark on the journey to develop innovative solutions for purifying water, fruits & vegetables and air. With the use of an innovative technology and supported by a competent service network, we have been able to create a brand, which has become synonymous with well-being and health.

Continuing with the tradition, we now present the KENT Wet & Dry Vacuum Cleaner, with state-of-the-art technology & feature to pick wet spills and dry dirt to provide clean, dust-free and spotless surroundings.

KENT Wet & Dry Vacuum Cleaners, do not use filtration bags, unlike traditional vacuum cleaners available in the market. The dust and wet spills is collected in a stainless steel body with a 20 L capacity for easy disposal of waste.

## Features of KENT Wet & Dry Vacuum Cleaner

1. Picks up dry dust and wet spills from the surface.
2. Blower function to remove deep embedded dust.
3. Stainless steel body with 20 L capacity.
4. High efficiency motor with a strong suction force for efficient cleaning.
5. Rubberised wheel for ease movement.
6. Light weight & Low noise.

## Know Your Product



Extension Tube



Floor Brush



Wet Brush



Flexible Hose



Crevice Tool



Filter Bag



Multi-purpose Nozzle

## Items in the Box

1. KENT Wet & Dry Vacuum Cleaner	:	01 No.
2. Flexible Hose	:	01 No.
3. Extension Tube	:	01 No.
4. Crevice Tool	:	01 No.
5. Floor Brush	:	01 No.
6. Wet Brush	:	01 No.
7. Filter Bag	:	01 No.
8. Multi-purpose Nozzle	:	01 No.
9. User Manual	:	01 No.

## Assembling Your KENT Wet & Dry Vacuum Cleaner

1. Unpack the unit completely and remove any stickers that can prevent unit operation.
2. Check the unit for damages. Do not use it in case of any damages.
3. Before switching on the unit, make sure that your home mains voltage corresponds to the unit operating voltage.

### Attaching/ Detaching the Flexible Hose

#### a. Attaching

1. Attach the flexible hose in the air intake duct on the appliance, press until it clicks into position.
2. The grooves on the flexible hose cap must be aligned properly.



Attaching

#### b. Detaching

1. To detach the flexible hose from the air intake duct, rotate counter-clockwise and pull out.



Detaching

## Attaching/ Detaching Extension Tube

### Attaching

- Attach the extension tube to the handle by pushing it in the direction as shown in the figure.



 
### Detaching

- To detach it, pull in the reverse direction of the arrow.

## Attaching/ Detaching Wet Brush & Floor Brush

### Attaching

- Attach the wet brush to the extension tube in the direction of the arrow.

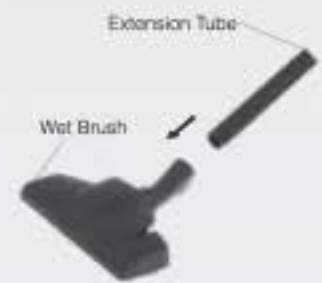

### Detaching

- You can detach the extension tube from the wet brush by pulling it.



## Using the Appliance

- Connect all the accessories.
- To use the appliance, plug the appliance to main power supply.
- Press on/off button to switch on your appliance.



## Use of Accessories

### Crevice Tool

- Your KENT Wet & Dry Vacuum Cleaner comes with a crevice tool which are ideal for cleaning surfaces, which are otherwise difficult to clean, such as radiators, couch corners, under the couch and in between cushions.



### Floor Brush

- Ideal for the daily cleaning of carpets and hard/ wooden floors.

 
### Wet Brush

- An ideal tool when it comes to wet cleaning. Use flat nozzle crevice tool or water brush for cleaning.


### Multi-purpose Nozzle

- Ideal for the daily cleaning of sofa, bed, topside, hard surface, curtains, TV, fridge and fan.



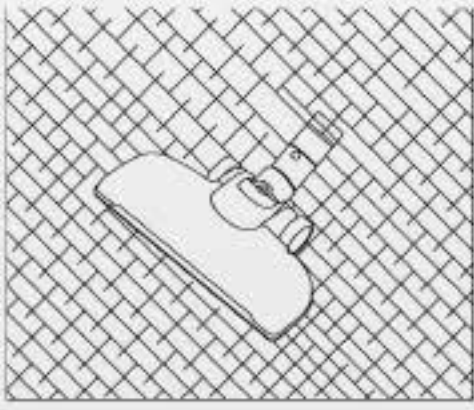

Carpet

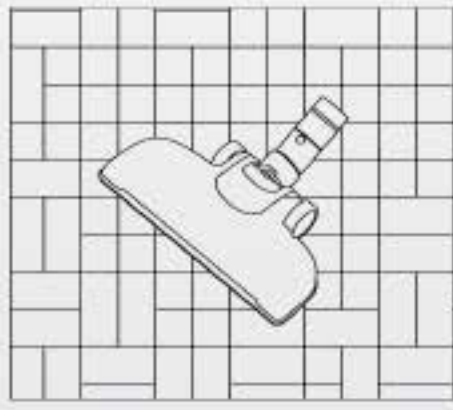 

Hard/ Wooden Floor



Wet Brush

## Important Instructions

1. Do not operate the vacuum cleaner too close to heaters, radiators, cigarette butts, etc.
2. Do not plug or unplug the device with wet hands.
3. Before using the vacuum cleaner, remove large or sharp objects from the floor in order to prevent damage of the HEPA filter.
4. To unplug, do not pull the electrical cord, instead pull out the plug.



**Note:** If the suction pipe or extension tube is blocked, switch-off the vacuum cleaner at once. Unplug the appliance and clear the blockage. Once done, start the vacuum cleaner again.

## Cleaning and Maintenance

 
1. Switch-off and unplug the appliance before cleaning it.

**Note:** Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.

2. Cleaning Filters: Your KENT Wet & Dry Vacuum Cleaner comes with a washable foam and HEPA filters for effective dry and wet cleaning.

### Removing and cleaning washable foam and HEPA filter

1. Remove the upper body assemble by opening the lock attached to the main body.

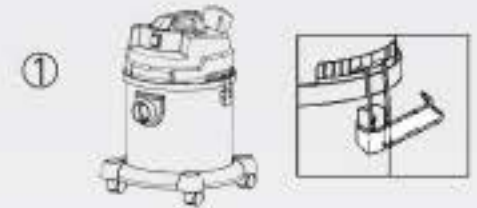


2. Gently pull the upper body to detach it from the main body.



3. Gently remove the filter cartridge by rotating and pulling it out.

4. Detach the HEPA filter from the outer foam filter by pulling it out.

 5. Rinse filters in lukewarm water and dry them completely.

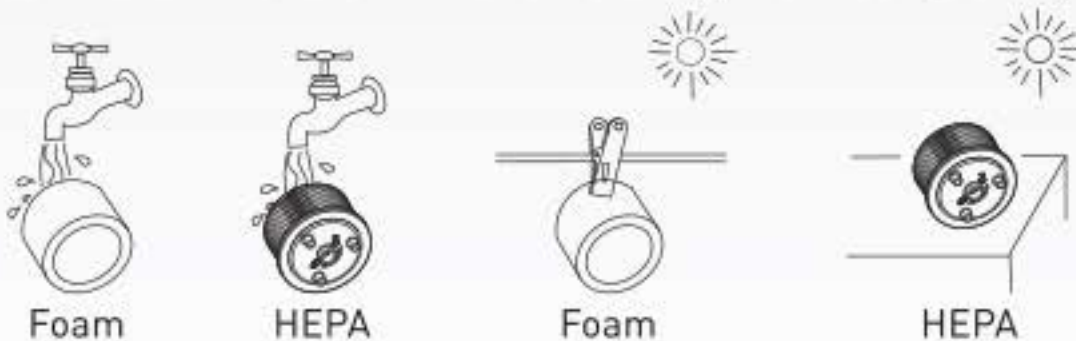

6. Once the filters are dry, put them back in reverse order.



7. Filters should be cleaned at least twice in a year, or when it becomes visibly soiled.

8. Always operate the appliance with filters installed.

9. Always unplug the appliance before cleaning the filters.

10. Do not use washing machine to rinse filters.

11. Do not use a hair dryer to dry it.

## Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Plug out the appliance when not in use.
- Keep the appliance out of the reach of children.



## Important Safety Instructions

When using an electrical appliance, basic precaution should always be followed, including the following:

1. Do not leave vacuum cleaner switched on when plugged in. Unplug, when not in use and before servicing.
2. Use the appliance only as described in the manual.
3. Always use manufacturer's recommended attachments only.
4. Do not use the appliance if the cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center.
6. Never use the cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep the cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug out the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn off all controls before unplugging.
11. Use extra precaution while cleaning stairs.
12. Do not use the appliance to pick any flammable or combustible liquids, such as gasoline, and also do not use in the areas where they may be present.
13. Unplug before connecting the hose.
14. Do not pick up anything that is burning or leaving smoke, such as cigarettes, matches, or hot ash.
15. Never use the appliance without the filter in place.
16. If the supply cord is damaged, it must be replaced by the manufacturer or a service agent, or a similarly qualified person, in order to avoid a hazard.
17. This appliance is suitable for indoor use only.
18. Keep away from the reach of children.
19. The appliance is not designed to be used by people who are physically or mentally disabled, mentally handicapped or lack the relevant experience and knowledge, unless a person responsible for their safety uses the product with supervision and guidance.

## Troubleshooting

Problem	Possible Cause	Possible Solutions
The appliance does not switch on.	<ol style="list-style-type: none"> <li>1. Power Cord not firmly plugged into socket.</li> <li>2. No power in the main supply.</li> </ol>	<ol style="list-style-type: none"> <li>1. Plug in the unit firmly.</li> <li>2. Check the fuse or cutout switch. Replace fuse or reset the switch.</li> <li>3. Call authorized service center.</li> </ol>
The appliance has weak suction power	<ol style="list-style-type: none"> <li>1. Filters are blocked.</li> </ol>	<ol style="list-style-type: none"> <li>1. Switch-off the cleaner and disconnect the cleaner from main power supply.</li> <li>2. Remove the filter and clean them.</li> <li>3. Clean the remaining dust inside the dust container.</li> </ol>
The hose or brush does not pick any dust	<ol style="list-style-type: none"> <li>1. Hose is choked or some blockage on brush.</li> </ol>	<ol style="list-style-type: none"> <li>1. Switch-off the cleaner and disconnect the cleaner from main power supply.</li> <li>2. Remove hose and/or brush and remove any blockage.</li> </ol>

## Technical Specifications

Product	<b>KENT Wet &amp; Dry Vacuum Cleaner KSL - 612</b>
Product Code	16017
Net Weight	6.2 kg
Input Power Supply	Single Phase 220 V AC, 50-60Hz. <input type="checkbox"/>
Max. Vacuum Pressure	> 18 kPa
Airflow	> 1.8 m <sup>3</sup> /min.
Noise (dB)	< 88 dB (A)
Power Cord Length	4.5 m
Maximum Power	1200 W

**KENT**  
*Cyclonic*  
*Vacuum Cleaners*  
**HOUSE of PURITY**



Imported & Marketed by:  
**KENT RO SYSTEMS LTD.**  
A-6, Sector-87, Noida-201 305, U.P., India.

**For customer complaints,**  
**contact our Customer Care Officer at:**  
E-6, 7 & 8, Sector-59, Noida, U.P.-201 309, India.  
Call: 92-789-12345  
E-mail: [service@kent.co.in](mailto:service@kent.co.in) or visit us at [www.kent.co.in](http://www.kent.co.in)